

# Atmosphere AZM4 / AZM8 / AZMP4 / AZMP8

 
## Quick Start guide

### Welcome

Thank you for choosing AtlasIED and the Atmosphere line of signal processors for your project. The Atmosphere family of products are designed to meet the highest standards for design, quality, and value that our customers have come to expect from AtlasIED. The flexibility and breadth of available accessories that the Atmosphere ecosystem offers is unmatched in the industry and makes it the perfect solution for a wide variety of applications. With a new approach to solving real world customer problems, the Atmosphere line of products sets the new standard for the fixed architecture zone based processing market. From all of us at AtlasIED, we once again thank you for your purchase and look forward to working with you in the future.



Scan QR code to download the full user manual. The user manual can also be found at the following address: [www.atlasied.com/atmosphere\\_manual](http://www.atlasied.com/atmosphere_manual)


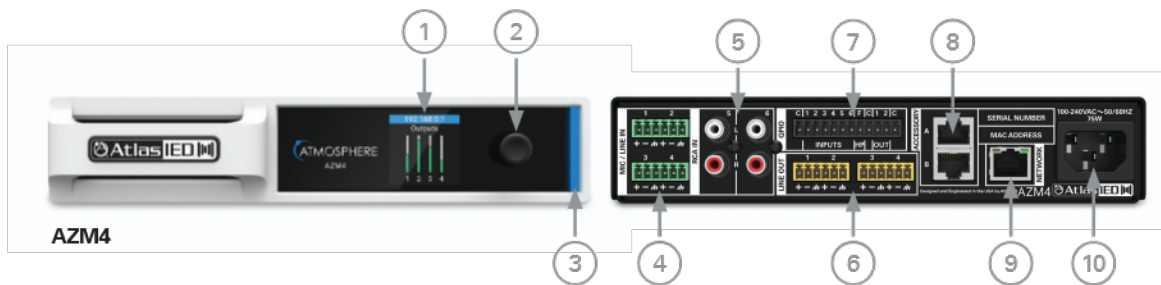


### Front and Back Panel Controls / Connections


- Color screen displays the IP address, shows system information, and allows changes to network settings
- Push button encoder for navigating front panel menu
- Status Light Bar
  - Blue – Unit is powered on and operating normally
  - Flashing Red – Fault detected
- Balanced Mic / Line inputs with phantom power
- Unbalanced Mono Summed RCA Inputs
- Balanced Line Outputs
- GPIO and High Priority Inputs
  - Recall routines
  - Recall scenes
  - Trigger GPO preset
  - Combine rooms
  - Recall bell schedule
  - Trigger messages
  - Play high priority message
- Accessory ports for Atmosphere accessories
- Network port
- IEC Inlet



  **AZMP4**

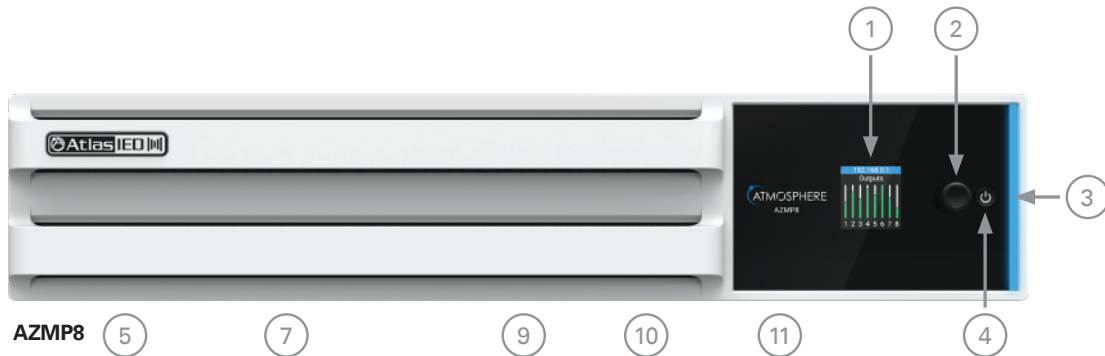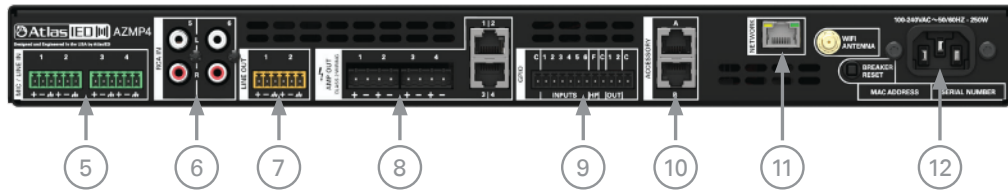

**AZMP8**

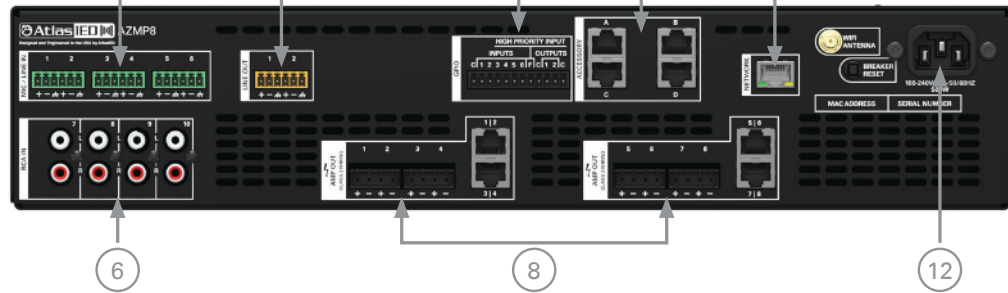 

### Front and Back Panel Controls / Connections

1. Color screen displays the IP address, shows system information, and allows changes to network settings
2. Push button encoder for navigating front panel menu
3. Status Light Bar
  - Blue – Unit is powered on and operating normally
  - Flashing Red – Fault detected
4. Power button
5. Balanced Mic / Line inputs with phantom power
6. Unbalanced Mono Summed RCA Inputs
7. Balanced Line Outputs
8. Amplifier Outputs
9. GPIO and High Priority Inputs
  - Recall routines
  - Recall scenes
  - Trigger GPO preset
  - Combine rooms
  - Recall bell schedule
  - Trigger messages
  - Play high priority message
10. Accessory ports for Atmosphere accessories
11. Network Port
12. IEC Inlet

## Logging Into The AZM / AZMP

1. Open a web browser on a device that is on the same network as the AZM / AZMP
2. Navigate to the IP address shown on the front panel using the web browser address bar
3. Login using the username "admin" and password "admin"
4. Follow the on screen instructions to change the default login credentials



 
## User Interface



- |                     |  |                        |  |
|---------------------|--|------------------------|--|
| 1. <b>Dashboard</b> | General system information   | 8. <b>Accessories</b>  | View and configure all accessories   |
| 2. <b>Sources</b>   | Add and configure sources  | 9. <b>Scheduler</b>    | Schedule routines, scenes, messages, bells, GPIO presets, and room combine |
| 3. <b>Zones</b>     | Create and configure zones   | 10. <b>Self Test</b>   | Configure automatic system tests and notifications                         |
| 4. <b>Messages</b>  | Create custom message events   | 11. <b>Settings</b>    | View and set global parameters for the AZM                                 |
| 5. <b>Scenes</b>    | Create preset scenes (volume, source, and mute)  | 12. <b>User</b>        | Add/remove/edit user accounts  |
| 6. <b>Routines</b>  | Create event to simultaneously trigger a scene, message, GPIO, and/or bell schedule change | 13. <b>Full Screen</b> | Uses entire screen to display the user interface                           |
| 7. <b>GPIO</b>      | Configure GPIO port behavior   |                        |  |

## Connecting Devices To The AZM / AZMP For Configuration

Out of the box, the AZM / AZMP is configured to connect to an existing network via the back panel Ethernet port. However, there are two additional methods for connecting to the AZM / AZMP for configuration. If no existing network is available, it is recommended that the onboard Wi-Fi be used in access point mode for initial configuration.

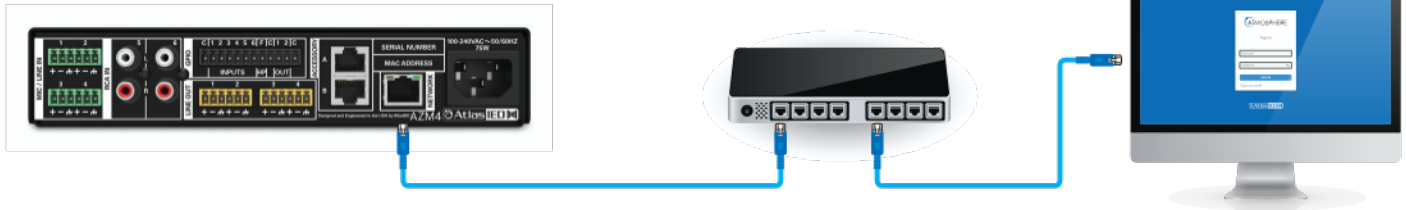

### 1 – Ethernet Connection (Wired connection)

- Connect an RJ45 cable (CAT5e or CAT6) from the AZM / AZMP network port to an existing network
- Using a web browser enabled device on the network, navigate to the IP address that appears on the AZM / AZMP front panel screen using the address bar located in the web browser



### 2 – Wi-Fi Connection (Connect to existing wireless network)

- From the front panel menu enable Wi-Fi mode (Network>WiFi>Change Mode>WiFi then confirm the change)
- Select the Wi-Fi network you would like to connect to (Network>WiFi>WiFi Networks)
- Enter the password and then select the green check-mark to connect to the network

**Note:** The Wi-Fi connection can be set up in the user interface if the AZM / AZMP is connected via the Ethernet port

 
 


### 3 – Access Point Connection (On board Wi-Fi creates a local wireless network for connection)

- From the front panel menu enable Access Point mode (Network>WiFi>Change Mode>Access Pt then confirm the change)
- The unit will now broadcast an SSID (AtlasIED\_AZM/AZMP will be the default SSID) that can be found using Wi-Fi enabled devices
- Select the now available network from the settings page on your device and connect (The default password is AtlasIED. This can be changed in the user interface)
- Using a web browser on the device, navigate to the IP address that appears on the AZM / AZMP front panel screen using the address bar located in the web browser


## Connecting Accessories

All accessories are plug and play and are recognized by the AZM / AZMP when plugged in. Below are rules that need to be followed in order to guarantee adequate and reliable performance of all connected accessories.

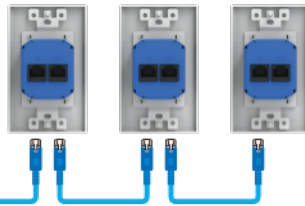
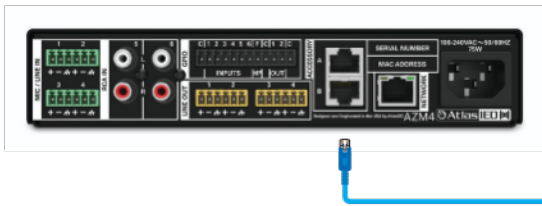


- CAT5e or CAT6 cable should be used to connect accessories to the host processor

 
- One audio wall plate (A-XLR, A-RCA, A-BT) or X-ZPS can be used per accessory port

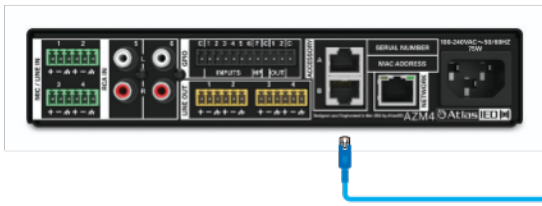

- Up to 8 accessories can be daisy chained from a single port
- Up to 16 accessories can be connected to a single AZM / AZMP (a maximum of 8 X-ANS accessories can be used per AZM / AZMP)
- Each Accessory port can accept up to 1 remote audio wall plate (2 per AZM4 / AZMP4, 4 per AZM8 / AZMP8)
- The maximum cable length from the AZM / AZMP to the last accessory on the chain is 1000' (305m)
- There are no cable length restrictions between accessories
- The "IN" port is connected to the upstream device (AZM / AZMP or other accessory)
- The X-ZPS paging station consumes 3 accessory slots per port, therefore the maximum number of devices on a single port including the X-ZPS is 6 total

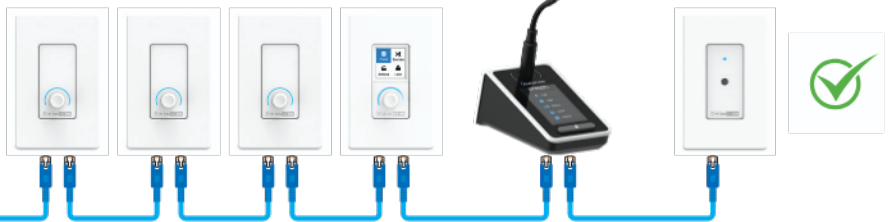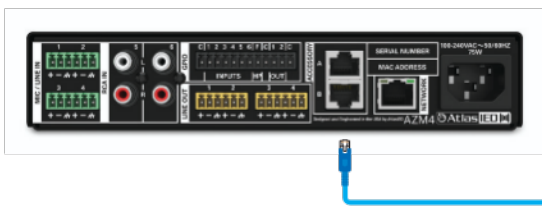  

- No limits exceeded

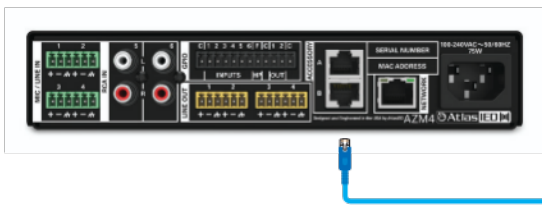 

- Too many audio inputs, max 1 per port
- Too many devices on port, max 8 (without X-ZPS) or max 6 (with X-ZPS)

## Available Accessories



### X-ZPS

Touchscreen zone paging station with all call and custom group paging features combined with a high-quality, gooseneck microphone. Also serves as a system controller for volume, source selection, message recall, and more



### C-V / C-V-EU

Volume controller



### C-ZSV / C-ZSV-EU

Pin code protected, multi-zone, volume, source, message recall, routine, scene, and GPO trigger controller



### A-XLR / A-XLR-EU

Single balanced mic line XLR with phantom power



### A-RCA / A-RCA-EU

Mono summed unbalanced RCA / 3.5mm



 
### A-BT / A-BT-EU

Mono summed commercial Bluetooth endpoint with NFC



### X-ANS / X-ANS-EU


Ambient noise compensation sensor

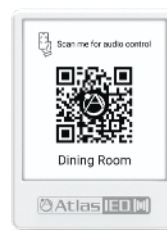

### X-GEM

Placard for printed virtual wall controller QR Code
 
## Important Safety Instructions

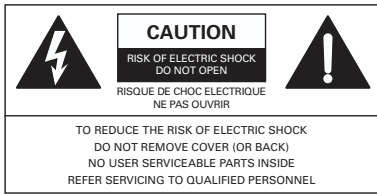

Labeling on products and the Installation Instructions & User Manual may use safety related graphical symbols as shown below to note safety requirements.

⚡ **Lightning Bolt:** lightning flash with arrowhead symbol, within an equilateral triangle, WARNING symbol, is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be sufficient in magnitude to constitute a risk of electric shock to persons or domestic animals.

⚠ **Exclamation Point:** The exclamation point within an equilateral triangle, CAUTION symbol, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions, or a hazard that can damage equipment.

⚠ Do not proceed beyond a WARNING or CAUTION notice until you have understood the hazardous condition and have taken appropriate steps.

⚠ Ne continuez pas avant d'avoir pris connaissance du danger et prendre les mesures appropriées.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this device near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other device that produce heat.
9. This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
10. To completely disconnect this equipment from the mains, disconnect the power supply cord plug from the receptacle.
11. The mains plug of the power supply cord shall remain readily operable.

12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.
13. Only use attachments / accessories specified by the manufacturer.
14. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the device. When a cart is used, use caution when moving the cart / device combination to avoid injury from tip-over.



15. Unplug this device during lightning storms or when unused for long periods of time.
16. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, splashing, or place objects filled with liquids on the equipment.

**AVERTISSEMENT:** Afin de réduire le risque d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie, à l'humidité, à l'égouttement, aux éclaboussures, et ne posez pas des objets remplis de liquide sur l'appareil

**WARNING:** If apparatus is equipped with Class I grounding plugs for safety purposes, it must be connected to MAINS that employ a protective earth ground connection.

**AVERTISSEMENT:** si l'appareil est équipé de prises de terre classe I, pour des raisons de sécurité, il doit être branché sur un réseau ayant une prise de terre de protection.

**WARNING:** The MAINS plug on this device may be used as the DISCONNECT DEVICE for MAINS power and must remain readily operable.

**AVERTISSEMENT:** La prise principale de cet appareil peut être utilisé comme DISPOSITIF de DECONNEXION du courant principal et doit rester facilement accessible.

**WARNING:** Installation and maintenance of AtlasIED equipment is to be made by trained / qualified personnel and must conform to all applicable local codes.

**AVERTISSEMENT:** l'installation et la maintenance des équipements AtlasIED doit être faite par du personnel formé / qualifié et doivent être conformes à toutes les réglementations locales en vigueur.

**WARNING:** If unit contains a lithium battery, there is a danger of explosion. Replace only with the same or equivalent type.

**AVERTISSEMENT:** Si l'unité contient une pile au lithium, il y a un danger d'explosion. Remplacez-la uniquement avec un modèle identique ou équivalent.

**WEEE NOTICE:** This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

